ARAT Navigation mount for

Type: V.W. Caddy
Model 2004 onwards

Part No: NS1349

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

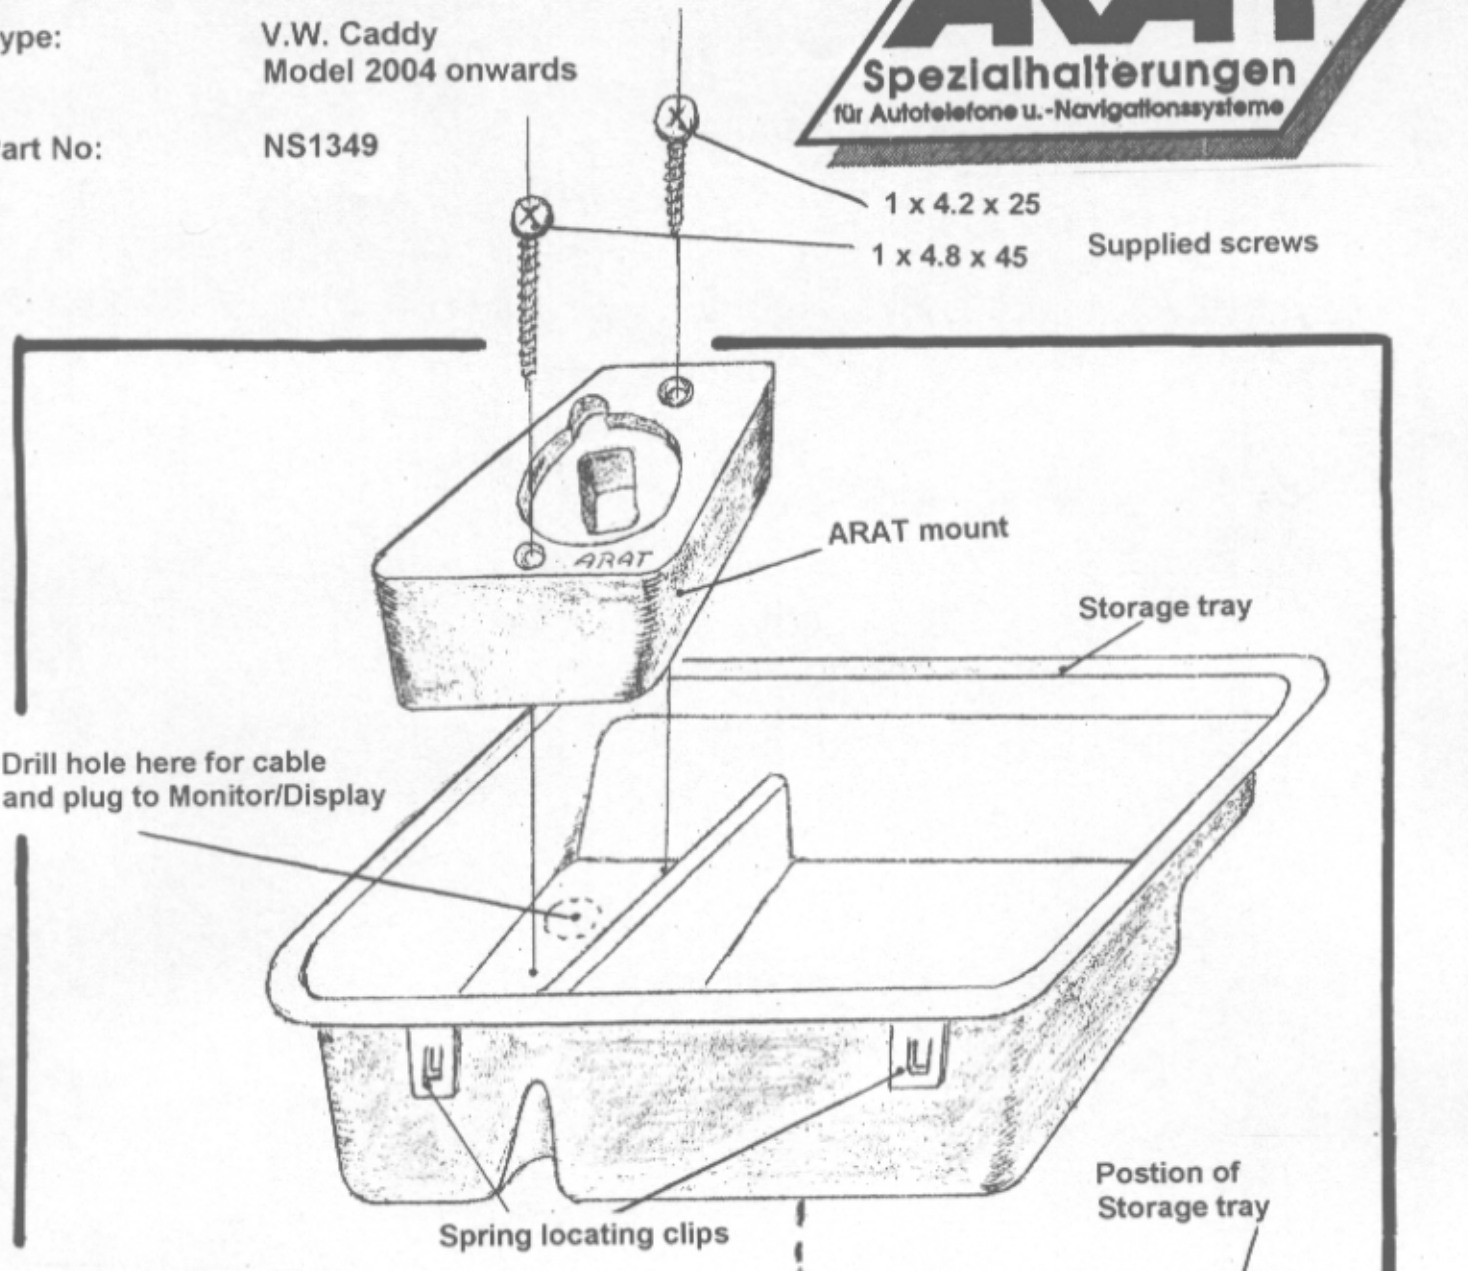

Installation instruction

1. Remove the storage tray from its position
2. Drill a hole in the base of the tray to channel the cable and plug to the monitor/display
3. Place the ARAT mount into the contours of storage tray, and secure the mount with the supplied screws into the base of the storeage tray

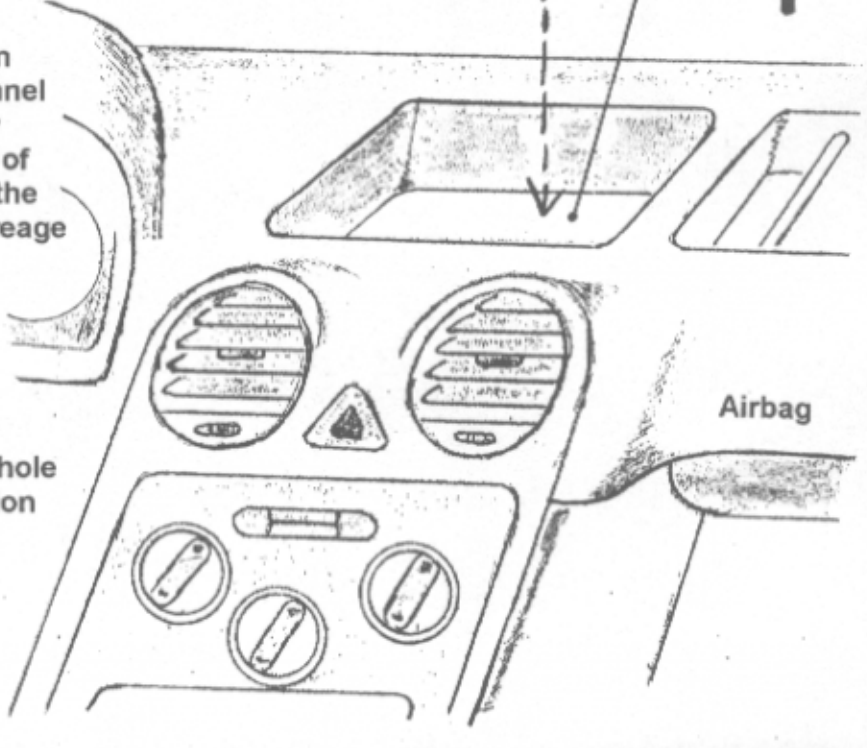

Cable chanelling

Place the cable to the display via the drilled hole In the storage tray base, and via the navigation mount